


ULTIMAX 1:1 5KW BALUN

Depending on the Model purchase use the unit for the proper antenna if you're using it for a dipole use the eyebolts for wire stress relief and then attach the lead of the wires to the side studs.

For the Yagi model , find the best way to attach it to the boom, using zip ties work very well , then attach lead wires (supply by customer) to driven element studs.

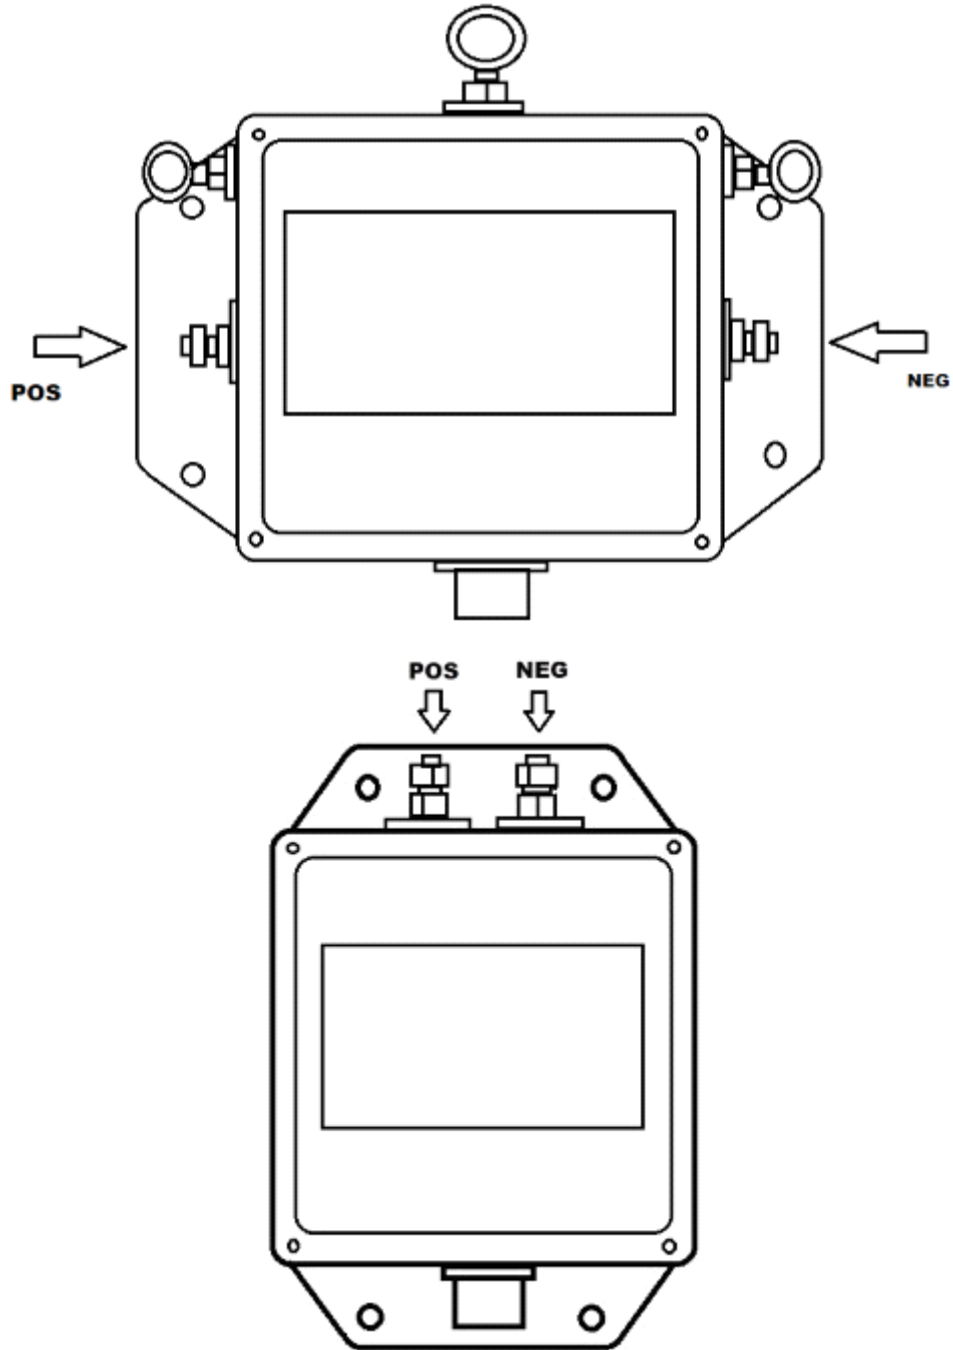

www.ultimaxantennas.com

